

One-Button Remote Transmitter Programming Instructions er og tig tigt som sig Storetig

Moving door can cause serious injury or death.

- Do Not install transmitter unless the door operator's safety reverse works as required by the door operator's manual.
- Wall control must be mounted in sight of door.
- Keep people clear of opening while door is moving.
- Do Not allow children to play with the transmitter or door operator.

If safety reverse does not work properly:

- Close door then disconnect operator using the manual release handle.
- **Do Not** use transmitter or door operator.
- Refer to Door and Door Operator Owner's Manuals before attempting any repairs.

This Remote comes from the factory designed to operate any Overhead Door® CodeDodger® type garage door opener.

A. For use with Learn Code Button equipped Openers (1995 to Present) —

ON REMOTE > 1. Remove the battery's protective film by pulling it out the bottom of the remote.

ON POWERHEAD > 2. Locate the Learn Code Button and Learn Code Indicator LED on your opener's powerhead (FIG. 1A) (See owner's manual).

- 3. Press and release the Learn Code Button—the Red Learn Code LED will blink rapidly.
- ON REMOTE > 4. Press and release the Remote Button, (FIG. 2)—the Learn Code LED will stay on (stops blinking)
 - 5. Press and release the Remote Button again—the Learn Code LED will turn off.
 - 6. Press and release the Remote Button again—the Door Opener will run.

THE REMOTE IS NOW PROGRAMMED.

Repeat as necessary for additional remotes.

B. For use with **Program/Set Button equipped** Openers (2010 to Present)—

ON REMOTE > 1. Remove the battery's protective film by pulling it out the bottom of the remote.

ON POWERHEAD > 2. Locate the Program/Set Button and Programming Indicator LEDs on your opener's powerhead (FIG. 1B) (See owner's manual).

- 3. Press the Program/Set button until the round LED will turn blue.
- 4. Release the Program/Set button—the long LED will blink purple.
- ON REMOTE > 5. Press and release the Remote Button, (FIG. 2)—the long LED will turn steady purple
 - 6. Press and release the Remote Button again—both LEDs will blink blue and turn off.
 - 7. Press and release the remote button again—the Door Opener will run.

THE REMOTE IS NOW PROGRAMMED.

Repeat as necessary for additional remotes.


C. Replacing the Battery.


(Programming is not affected by battery replacement.)


- 1. Slide the Battery Cover off the front of the remote (FIG. 2).
- 2. Slide the old battery toward the bottom of the remote and out.
- 3. Properly discard the old battery.
- 4. Slide a new (CR 2032 size) battery into position and slide the Cover back on.

POWERHEADS (for various models)

Circle shows location of Learn Code Button and LED or Program/Set button and LEDs as appropriate.

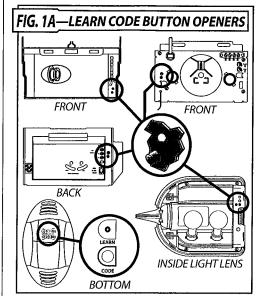

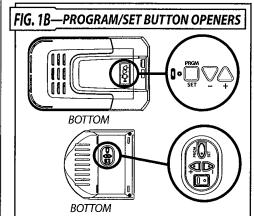

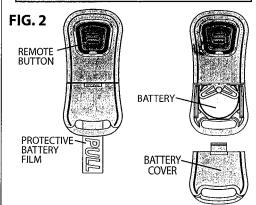

FOR HELP OR ANSWERS TO QUESTIONS, CALL 800-929-3667 or visit www.overheaddoor.com

FCC Part 15.21 Statement:

Changes of modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with FCC Part 15 and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareil s'râdio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.